

Features and advantages of UNIVERSAL CURRENT SENSITIVE RCCBs B type and B+ type

APPLICATION

- Fault protection (protection against indirect contact of live parts)
- Additional protection (protection in case of direct contact of live parts, $I_{\Delta n} \leq 30\text{mA}$)
- Fire Protection (for locations exposed to fire hazard)

Residual current sensitivity – UNIVERSAL

AC pure sinus residual current, 50/60Hz

A sinus and pulsating direct current, 50/60Hz

B AC + A + smooth direct current + high frequency (1 kHz)

B+ AC + A + smooth direct current + high frequency (20kHz)

Basic types

according to rated values:

4p B $I_n = 25\text{A}, 40\text{A}, 63\text{A}, I_{\Delta n} = 30\text{mA}, 100\text{mA}, 300\text{mA}$

4p B+ $I_n = 25\text{A}, 40\text{A}, 63\text{A}, I_{\Delta n} = 30\text{mA}, 100\text{mA}, 300\text{mA}$

according to breaking times:

4p B, B+ instantaneous, short time delayed (G/KV), selective (S)

according to the number of poles:

4p, 2p

Standards

IEC/EN 61008-1 basic standard for RCCB's AC and A type

IEC/EN 62423 additional requirements for type B

VDE 0664-400 B+ VDE standard for B+ requirements (20kHz)

Mode of operation

Pure a.c. and pulsating d.c. type residual current sensitivity, A voltage independent

Smooth d.c. current sensitivity: B, B+ voltage dependent

Minimum operating voltage: 50V

Typical applications

Which are vulnerable to smooth d.c. residual currents:

- Frequency converters,
- Photovoltaic systems, a.c side,
- Charging stations for electric vehicles,
- Variable speed machine tools,
- UPS, computer data centres
- Elevator controls,
- Cranes of all kinds
- Electronic equipment on construction sites,
- Test set-ups in laboratories,
- Installation in general where we can expect d.c. smooth direct residual currents, etc.

B type residual current circuit breaker EFI-4 B Instantaneous

New!

Rated residual current
0,03 - 0,3 A

Rated current
25 - 63 A

Type
B (Instantaneous)



EFI-4 B Instantaneous					
I_n [A]	$I_{\Delta n}$ [A]	Number of poles	Code No	Weight [g]	Packaging [pcs]
25	0,03	4	002062642	335	1/27
40	0,03	4	002062643	335	1/27
63	0,03	4	002062644	340	1/27
25	0,1	4	002063642	335	1/27
40	0,1	4	002063643	335	1/27
63	0,1	4	002063644	340	1/27
25	0,3	4	002064642	335	1/27
40	0,3	4	002064643	335	1/27
63	0,3	4	002064644	340	1/27

B+ type residual current circuit breaker EFI-4 B+ Instantaneous

New!

Rated residual current
0,03 - 0,3 A

Rated current
25 - 63 A

Type
B+ (Instantaneous)



EFI-4 B+ Instantaneous					
I_n [A]	$I_{\Delta n}$ [A]	Number of poles	Code No	Weight [g]	Packaging [pcs]
25	0,03	4	002062647	335	1/27
40	0,03	4	002062648	335	1/27
63	0,03	4	002062649	340	1/27
25	0,1	4	002063647	335	1/27
40	0,1	4	002063648	335	1/27
63	0,1	4	002063649	340	1/27
25	0,3	4	002064647	335	1/27
40	0,3	4	002064648	335	1/27
63	0,3	4	002064649	340	1/27

B type residual current circuit breaker EFI-4 B G/KV-Short time delay

Rated residual current
0,03 - 0,3 A

Rated current
25 - 63 A

Type
B (G/KV-Short time delay)

New!



EFI-4 B G/KV-Short time delay					
I_n [A]	$I_{\Delta n}$ [A]	Number of poles	Code No	Weight [g]	Packaging [pcs]
25	0,03	4	002062652	340	1/27
40	0,03	4	002062653	340	1/27
63	0,03	4	002062654	345	1/27
25	0,1	4	002063652	340	1/27
40	0,1	4	002063653	340	1/27
63	0,1	4	002063654	345	1/27
25	0,3	4	002064652	340	1/27
40	0,3	4	002064653	340	1/27
63	0,3	4	002064654	345	1/27

Residual current circuit breakers

B type residual current circuit breaker EFI-4 B S-Selective

New!

 Rated residual current
0,1 - 0,3 A

 Rated current
25 - 63 A

 Type
B (S-Selective)
EFI-4 B S-Selective

I_n [A]	$I_{\Delta n}$ [A]	Number of poles	Code No	Weight [g]	Packaging [pcs]
25	0,1	4	002063662	340	1/27
40	0,1	4	002063663	340	1/27
63	0,1	4	002063664	345	1/27
25	0,3	4	002064662	335	1/27
40	0,3	4	002064663	335	1/27
63	0,3	4	002064664	340	1/27


Accessories for residual current circuit breakers EFI (16 - 80 A)

The PS EFI is fixed to EFI series switches. The width of the device is 9 mm, other dimensions are in compliance with EFI switches. The auxiliary switch PS EFI is used for the remote signalling of the state of contact's condition (closed/open) of EFI switches. During fitting, the EFI must be switched off. PS EFI and DA EFI can not be mounted both together, because both can only be mounted on the right side of EFI.

Auxiliary Switch PS EFI

Type	Contact	Code No.	Weight [g]	Packaging [pcs]
PS EFI - MD	b-contact/a-contact	002069001	50	1/12
PS EFI - 2M	2 x b-contact	002069002	50	1/12
PS EFI - 2D	2 x a-contact	002069003	50	1/12

a - contact = make contact (NO)

b - contact = break contact (NC)

Sealing piece EFI-2

Code No.	Weight [g]	Packaging [pcs]
002069011	2	2

Sealing piece EFI-4

Code No.	Weight [g]	Packaging [pcs]
002069012	3	2

Shunt trip release DA EFI

Type	Code No.	Weight [g]	Packaging [pcs]
DA EFI	002069004	45	1/12

